

Assembly Instructions

M12 Connectors Series W

Version 1.4.1

Hypertac GmbH, 14/02/2018

 
 
Germany



Assembly instructions

Straight female cable plug Type PC, PJ




Stripping Length		
	Hypertac® contacts	Stamped Contacts
x	4mm	3mm
A	23mm	

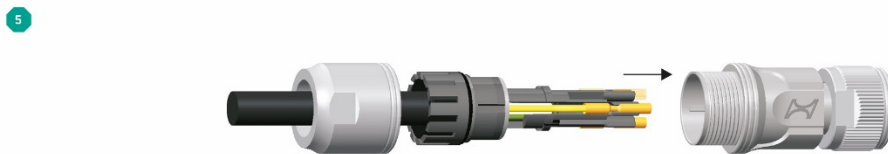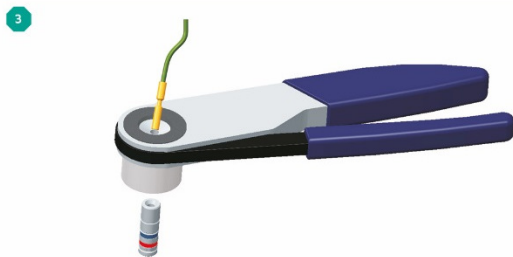

Assembly instructions

Angled female cable plug Type PE









Stripping Length		
	Hypertac® contacts	Stamped Contacts
x	3mm	4mm
A	35mm	

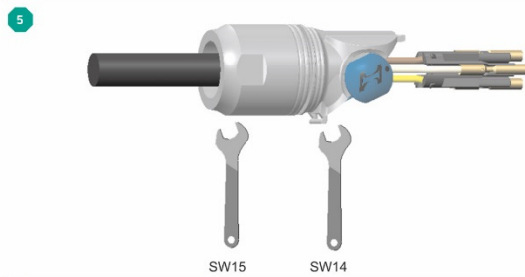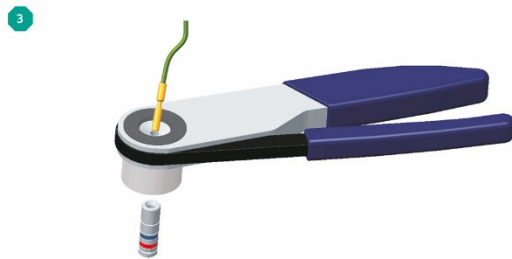   


Assembly instructions

Angled male and female cable plug with rotatable backshell Type PL, RL

Stripping Length	
	Machined contacts
x	4mm
A	~ 20-25mm

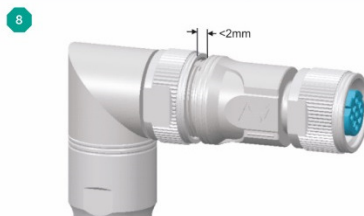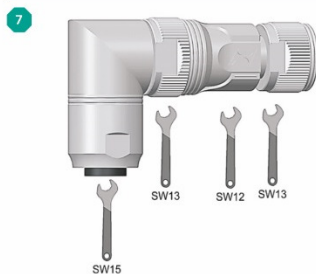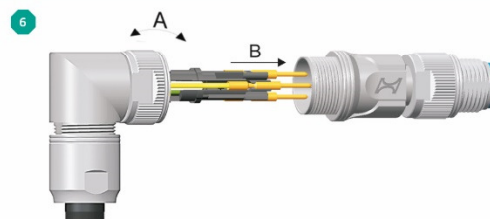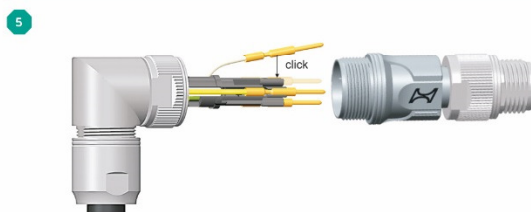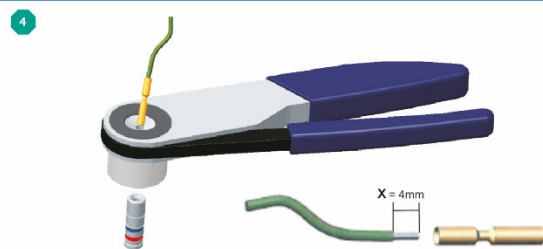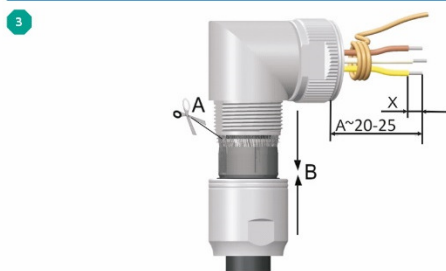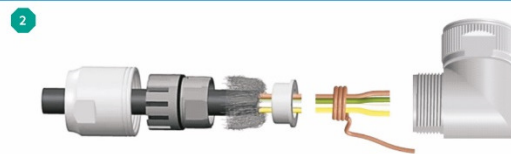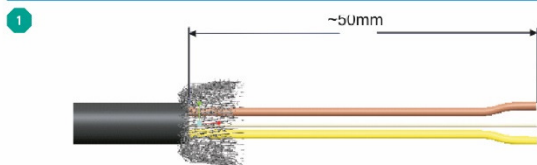        





Rotating angle

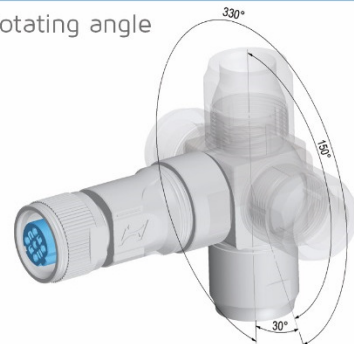 

Assembly instructions

Straight male cable plug Type RC, RJ


Stripping Length		
	Machined contacts	Stamped Contacts
x	4mm	3mm
A	23mm	

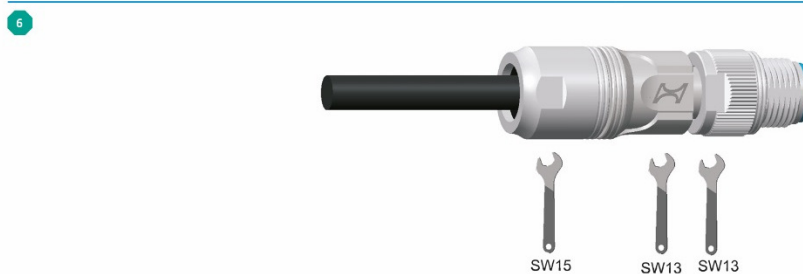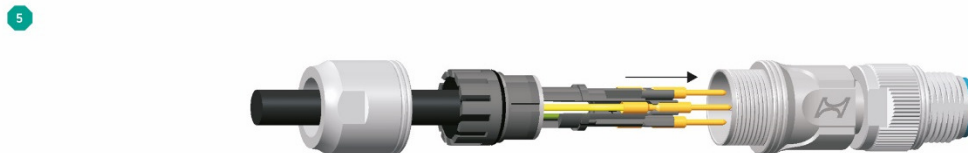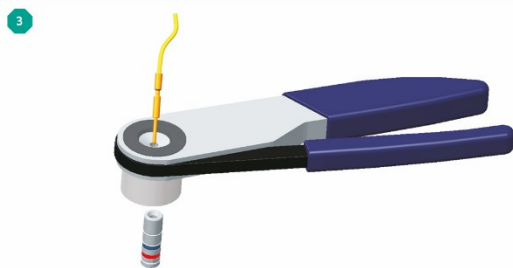    

Assembly instructions

Angled male cable plug Type RE


Stripping Length		
	Machined contacts	Stamped Contacts
x	4mm	3mm
A	35mm	

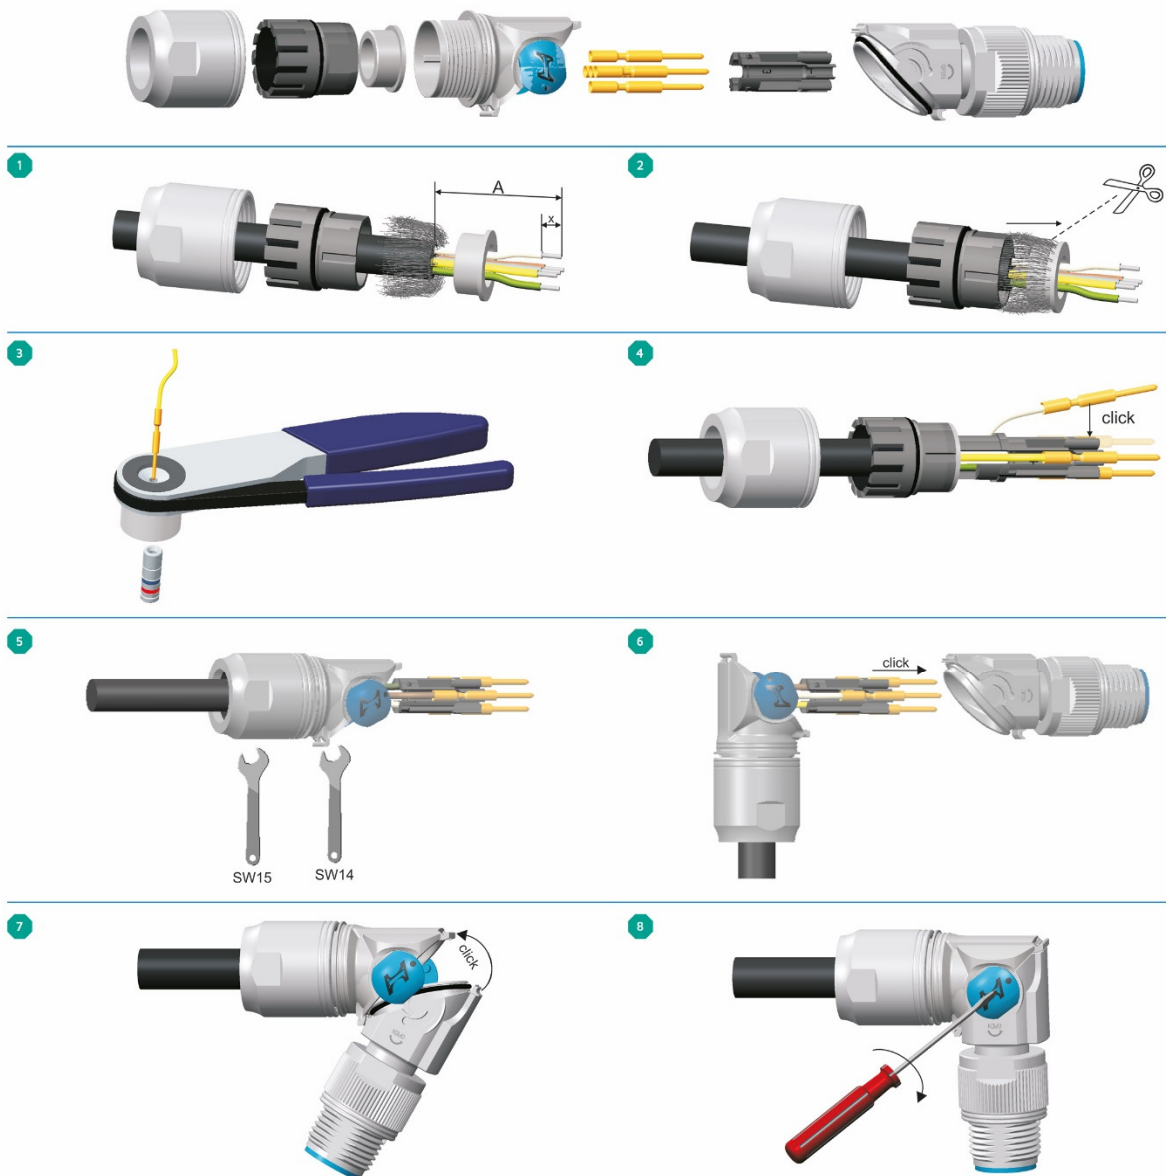 


Assembly instructions

Straight male receptacle Type EA, EB, ED

Stripping Length		
	Machined contacts	Stamped Contacts
x	4mm	3mm

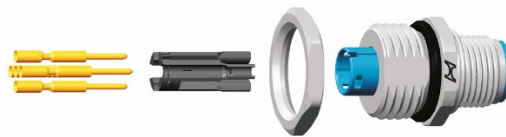 


1

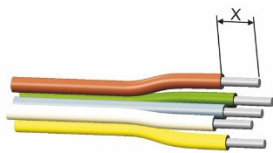 


2



 3

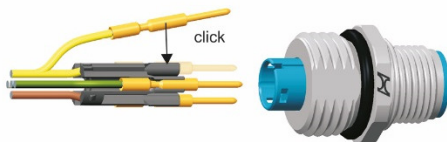


4

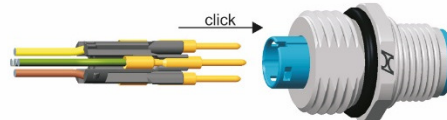 

5



 Mounting arrangement for straight receptacle and panel feed trough

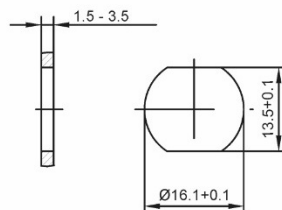


Assembly instructions

Angled male receptacle Type EC

Stripping Length		
	Machined contacts	Stamped Contacts
x	4mm	3mm



 
1

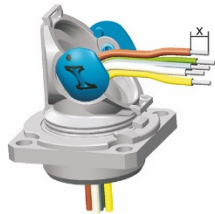


2



 3

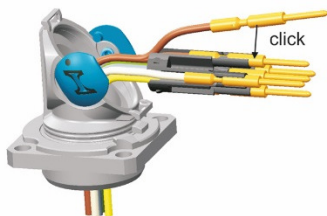

4

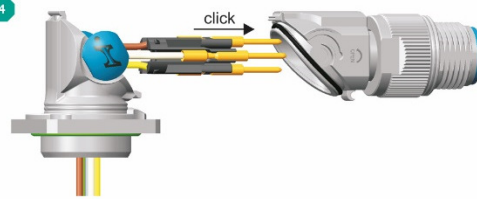 


5



6



 7

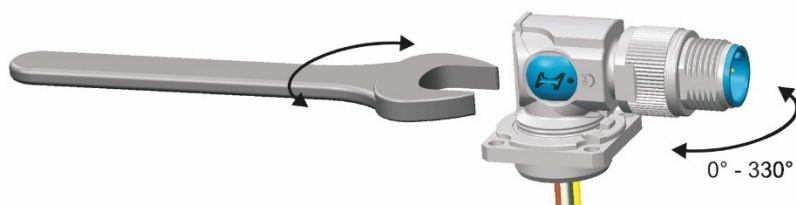


Assembly instructions

Female panel feed throughType DA,DB, DC, DD, DE

Stripping Length		
	Hypertac® contacts	Stamped Contacts
x	4mm	3mm



 
1

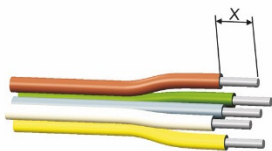


2



 3

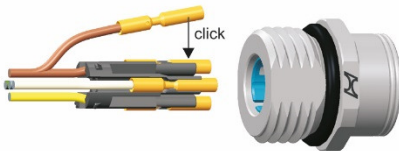

4

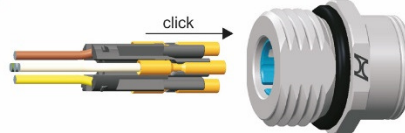 

5

