

HOW TO ORDER

Specify Model Number* JFD-XX-ABCDE
XX = Waveguide Band WR – number (triple junction units not available in WR-42)
A = Flange Type R – round (WR-28 through WR-10 partial band units only) S – square (WR-42 single junction and WR-28 only)
B = Unit Type I – isolators (triple junction units not available in WR-42) C – circulator (triple junction units not available in WR-42)
C = Configuration 1 – single junction 3 – triple junction (not available in WR-42)
D = Port Orientation (isolators only) S – straight in-line ports (standard) R – at right angle to one another (single junction only), please specify port orientation. Not available on fullband units. N – not applicable to circulators
E = Bandwidth P – partial band (WR-42 through WR-10) F – fullband (WR-42 and WR-28 only) N – nonstandard (please specify)
*Please specify center frequency and required bandwidth when ordering.