Assembly Instructions

HyperGrip® Plug

June 2023




Do Not Discard, Deliver to Manufacturing.
No Descartar, Entregar A Fabricación.
Instructions De Montage, Ne Pas Jeter.
Bitte nicht wegwerfen, bitte an die produktion weiter liefern.

Unshielded HyperGrip Plug

Note: Components depicted in images are representative of HG2; Assembly of HG3 and HG4 follows the same process

Step 1

Install red O-ring (optional)

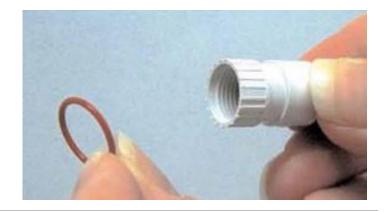


Step 2

O-ring installed



Step 3

Arrange components on cable

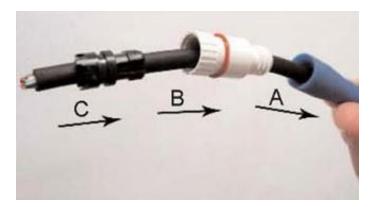


Crimp Termination Instructions

Step 4:


Strip wire

Insert into crimp barrel

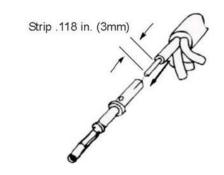

Insert contact into positioner as shown


Crimp

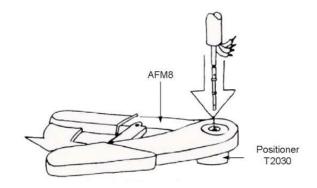


OR Solder Termination Instructions Step 4:

Strip wire

Insert into solder cup

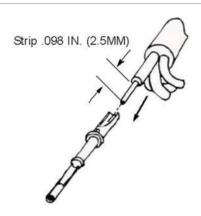


Solder wire into solder cup

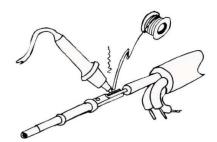

Step 5


Insert contacts

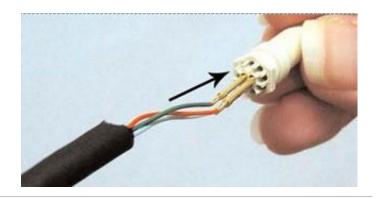

Step 6


Push in to the stop

Insertion tool #T2080

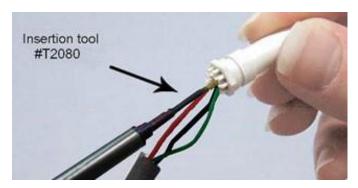

Step 7


Choose keying option

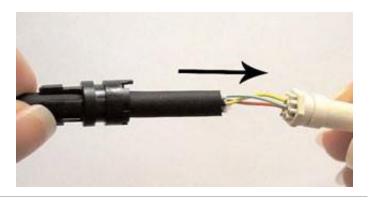

Step 8


Choose A, B, C, D, E or F

Note: contact count varies for HG3/HG4 (HG2 shown)

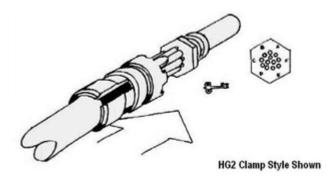


Step 9


Key tab with A through F

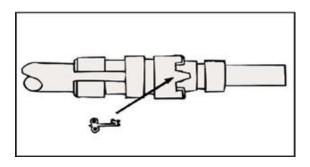

Step 10

Align clamp tab and latch slot

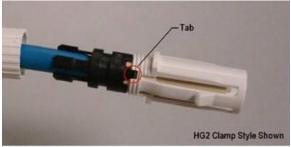

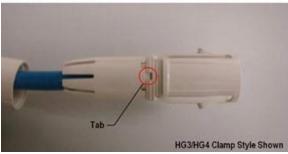


Step 11

Screw on plug nut

It is recommended that 3M 2-part epoxy #2216 or BONDiT B-4811 be applied on the threads of the nut (as illustrated) prior to the next step of assembly.


Cyanoacrylate adhesives are not recommended for use on HG connectors; their application may cause damage and void product warranties.

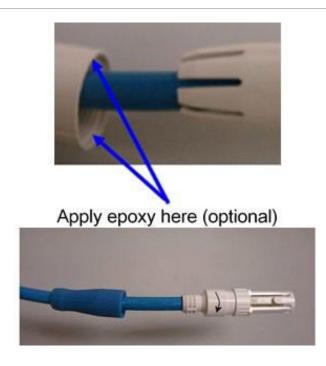

Step 12


Install latch assembly

Note: Assembled properly when latch tabs protrude from latch body cutouts

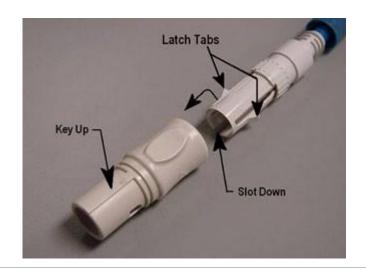

Step 13

Install strain relief

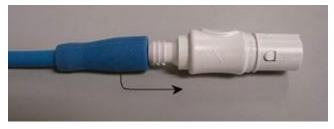


Step 14

Strain relief installed



Step 15

Install clear O-ring (optional)

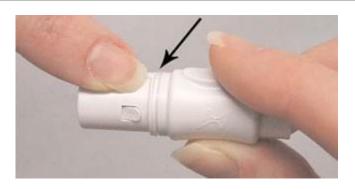

This product is covered by one or more of the following US Patents: 7,326,091; 7,661,995; 7,938,670 and D596,127; D615,932; D616,825.

Shielded HyperGrip Plug

Note: Components depicted in images are representative of HG4; assembly of HG2 and HG3 follows the same process

Step 1

Install red O-ring (optional)




Step 2

O-ring installed



Step 3

Arrange components on cable

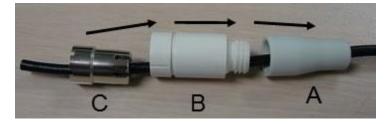


Step 4

Strip cable jacket back while leaving the jacket in place underneath cable clamp when fully assembled. Fold cable shield over remaining cable jacket.

Crimp Termination Instructions Step 5:


Strip wire

Insert into crimp barrel

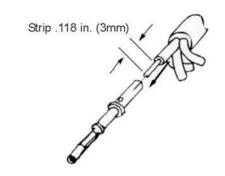

Insert contact into positioner as shown


Crimp

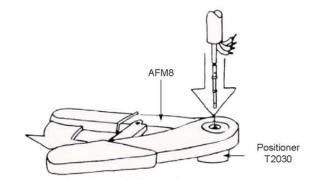


OR Solder Termination Instructions Step 5:

Strip wire

Insert into solder cup

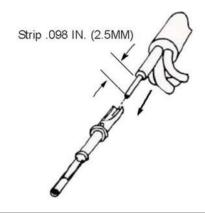


Solder wire into solder cup

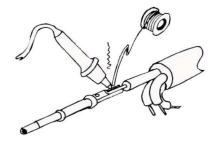

Step 6

Insert contacts

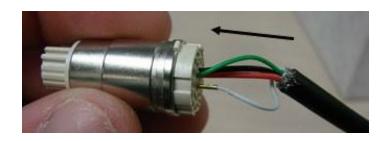


Step 7

Push in to the stop

Insertion tool #T2080

Note: contact count varies for HG2/HG3 (HG4 shown)

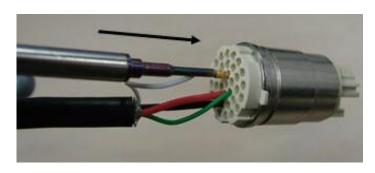

Step 8

Choose keying option

Choose keying option A, B, C, D, E or F (insulator tab seated in marked position on cable clamp)



Step 9

Align clamp tab and latch slot



Step 10

It is recommended that 3M 2-part epoxy #2216 or BONDiT B-4811 be applied on the threads of the nut (as illustrated) prior to the next step of assembly.

Cyanoacrylate adhesives are not recommended for use on HG connectors; their application may cause damage and void product warranties.



Step 11


Screw plug nut onto latching plug



Step 12


Install latch assembly

Note: Assembled properly when latch tabs protrude from latch body cutouts

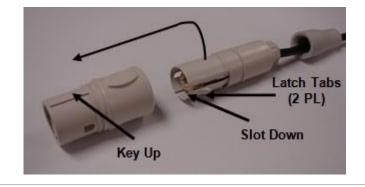

Step 13

Install strain relief

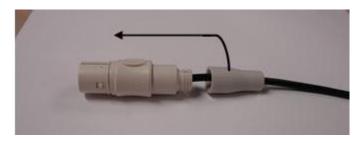

Step 14

Strain relief installed



Step 15

Install clear O-ring (optional)



This product is covered by one or more of the following US Patents: 7,326,091; 7,661,995; 7,938,670 and D596,127; D615,932; D616,825.

Worldwide Support

Connectors

Americas

Salas

connectors.uscsr@smithsinterconnect.com

Technical Support

connectors.ustechsupport@smithsinterconnect.com

Europe

Sales

connectors.emeacsr@smithsinterconnect.com

Technical Support

connectors.emeatechsupport@smithsinterconnect.com

Asia

Sales

asiacsr@smithsinterconnect.com

Technical Support

asiatechsupport@smithsinterconnect.com

Fiber Optics & RF Components

Americas

Sales

focom.uscsr@smithsinterconnect.com

Technical Support

focom.tech support@smiths interconnect.com

Europe

Sales

focom.emeacsr@smithsinterconnect.com

Technical Support

focom.tech support@smiths interconnect.com

Asia

Sales

focom.asiacsr@smithsinterconnect.com

Technical Support

focom.tech support@smiths interconnect.com

Semiconductor Test

Americas

Sales

semi.uscsr@smithsinterconnect.com

Technical Support

semi.techsupport@smithsinterconnect.com

Europe

Sales

semi.emeacsr@smithsinterconnect.com

Technical Support

semi.techsupport@smithsinterconnect.com

Asia

Sales

semi.asiacsr@smithsinterconnect.com

Technical Support

semi.techsupport@smithsinterconnect.com

RF/MW Subsystems

Americas, Europe & Asia

Sales

subsystems.csr@smithsinterconnect.com

Technical Support

subsystems.techsupport@smithsinterconnect.com

Connecting Global Markets

more > smithsinterconnect.com

in y D

Copyright© 2023 Smiths Interconnect | All rights reserved | Version 3.0

All of the information included in this document is believed to be accurate at the time of printing.

The information contained within this document is subject at all times to applicable Export Control regulations and legal requirements.